
Motorstar NA, Inc


Model M-14P Series II
Aircraft Engine

Parts Catalog

AIRCRAFT ENGINE M-14P

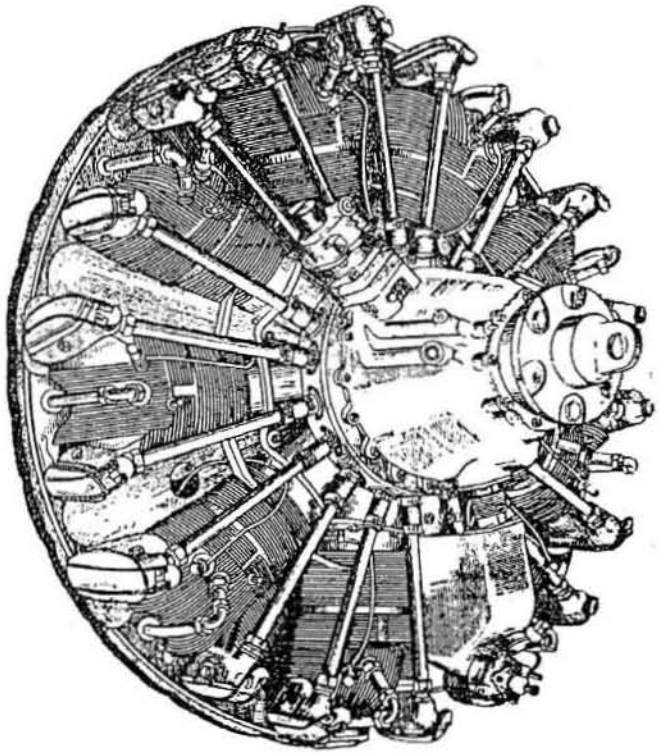

FRONT VIEW

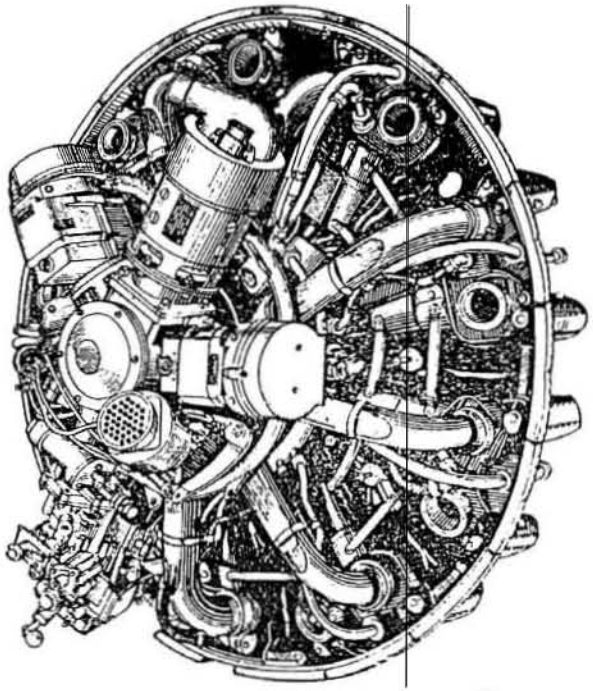

BACK VIEW

Table of Contents

ENGINE ACCESSORIES 5

PROPELLER GEAR REDUCTION ASSEMBLY 8

CRANKCASE FRONT COVER, MAIN CRANKCASE, CRANKSHAFT AND CONNECTING ROD ASSEMBLIES 11

CYLINDER, PISTON AND INTAKE TUBE ASSEMBLIES 17

VALVE ASSEMBLY 20

CAM AND PUSH ROD ASSEMBLIES 23

ENGINE BAFFLING 28

SUPERCHARGER AND REAR CRANKCASE ASSEMBLY 30

NOSE CASE AND CHIP DETECTOR ASSEMBLIES 35

OIL PUMP 38

ACCESSORY DRIVE CASE 41

TACHOMETER DRIVE ASSEMBLY 44

GENERATOR CLUTCH ASSEMBLY 46

GENERATOR DRIVE ASSEMBLY 48

MAGNETO DRIVE ASSEMBLY 50

COMPRESSOR DRIVE ASSEMBLY 52

IGNITION HARNESS ASSEMBLY 54

AIR COMPRESSOR AK-50A 57

AIR START LINES AND CYLINDER START VALVES 61

AIR START DISTRIBUTOR AND DRIVE 64

Engine Accessories


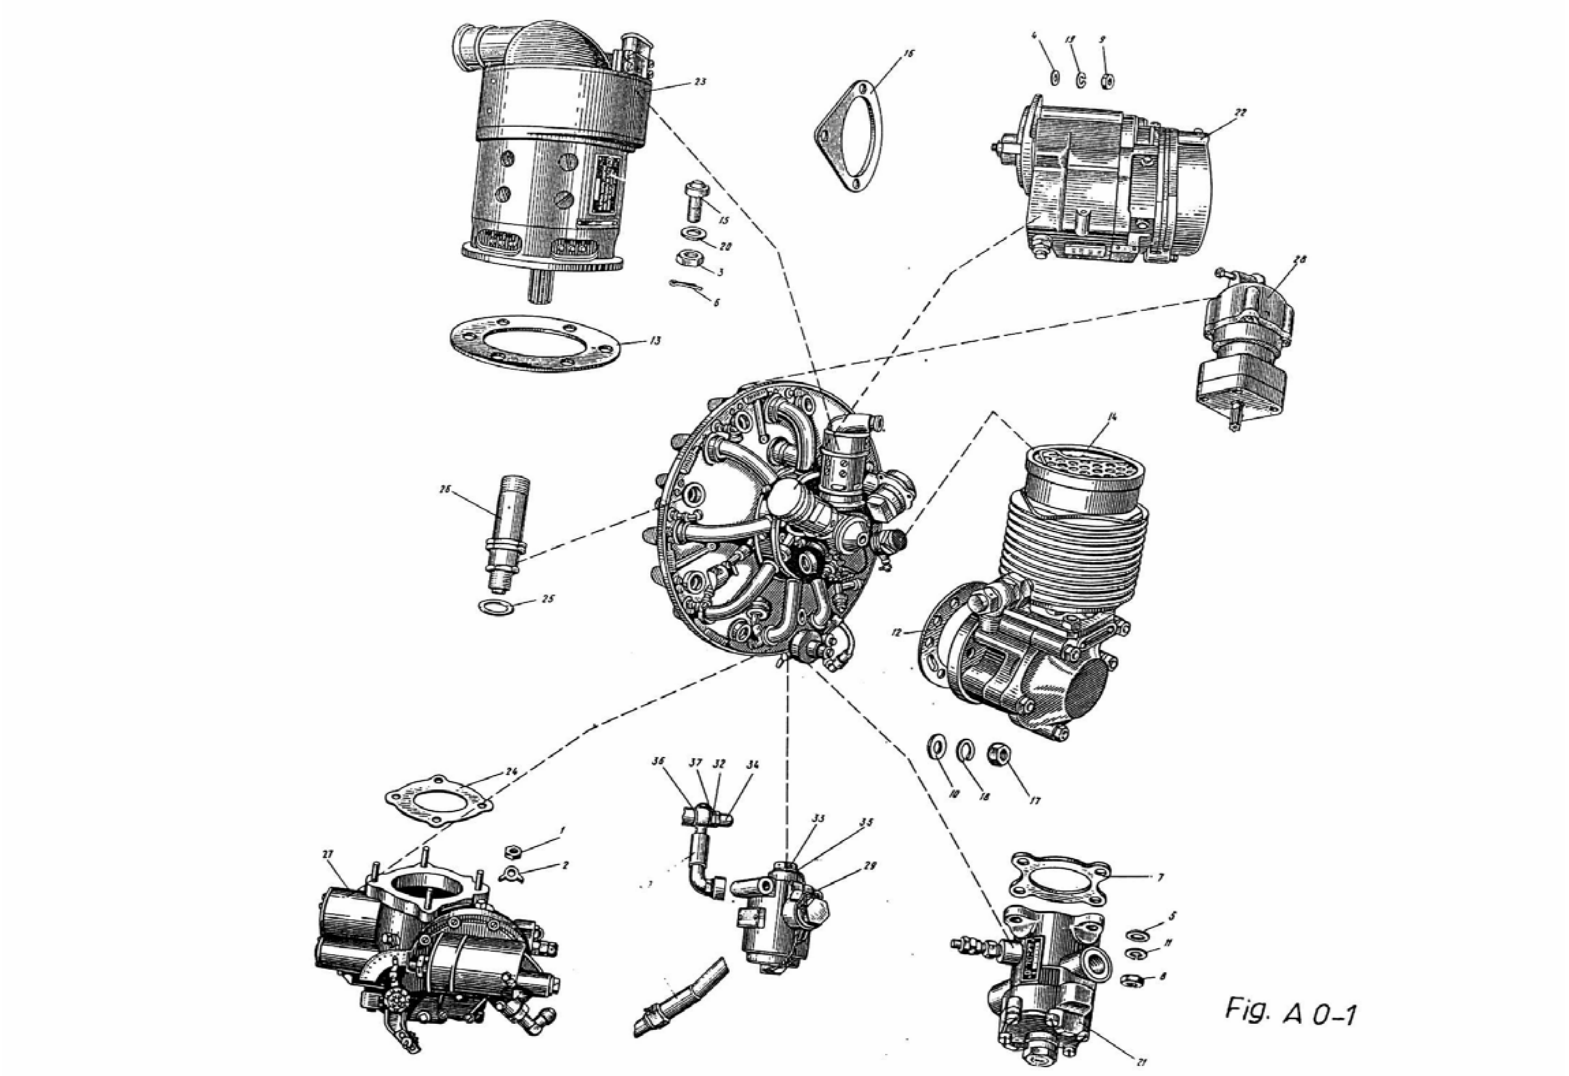


Fig. A 0-1

Part Number	0	Page No.	FIG. No.	#/Assy
11-04-40	Nut	5	AO1-1	1
14-17-03	Safety	5	AO1-2	4
14-011-340	Hinder cover	5		1
00-03-52	Nut	5	AO1-3	6
00-07-51	Washer	5	AO1-4	6
00-07-53	Washer	5	AO1-5	4
00-12-07	Split	5	AO1-6	6
10-11-31	Gasket	5	AO1-7	4
11-08-39	Nut	5	AO1-8	4
11-08-40	Nut	5	AO1-9	6
11-08-56	Washer	5	AO1-10	6
11-08-57	Washer	5	AO1-11	4
14-11-546	Gasket	5	AO1-12	1
14-411-10	Gasket	5	AO1-13	1
14-950-390-02	Compressor AK-50A	5	AO1-14	1
15-40-52	Screw	5	AO1-15	6
26-115-01	Gasket	5	AO1-16	2
66-RD-1	Nut	5	AO1-17	6
6.65G.05 GOST 6402	Grower washer	5	AO1-18	6
8.65G.05 GOST 6402	Grower washer	5	AO1-19	6
54537	Washer	5	AO1-20	6
702ML	Fuel pump	5	A01-21	1
M-9F	Magneto	5	A01-22	2
GSR-2000M	Generating	5	A01-23	1
1950-14-20	Gasket	5	AO1-25	18
SD-492MM	Spark plug	5	A01-26	18
AK-14P	Carburetor	5	A01-27	1
R-2 series a -11- a	Prop driver	5	A01-28	1
8D2.966.064	Filter	5	A01-29	1
14-011-270	Pipe-line	5	A01-30	1

14-011-280	Pipe-line	5	A01-31	1
14-711-38	Fitting	5	A01-32	1
14-911-045	Fitting	5	A01-33	2
11-08-272	Cover	5	A01-34	1
62-17-73	Gasket	5	A01-35	4
33M51-18-14,2-2	O-ring	5	A01-36	1
33M51-22-14,2-1	O-ring	5	A01-37	1


Propeller Gear Reduction Assembly

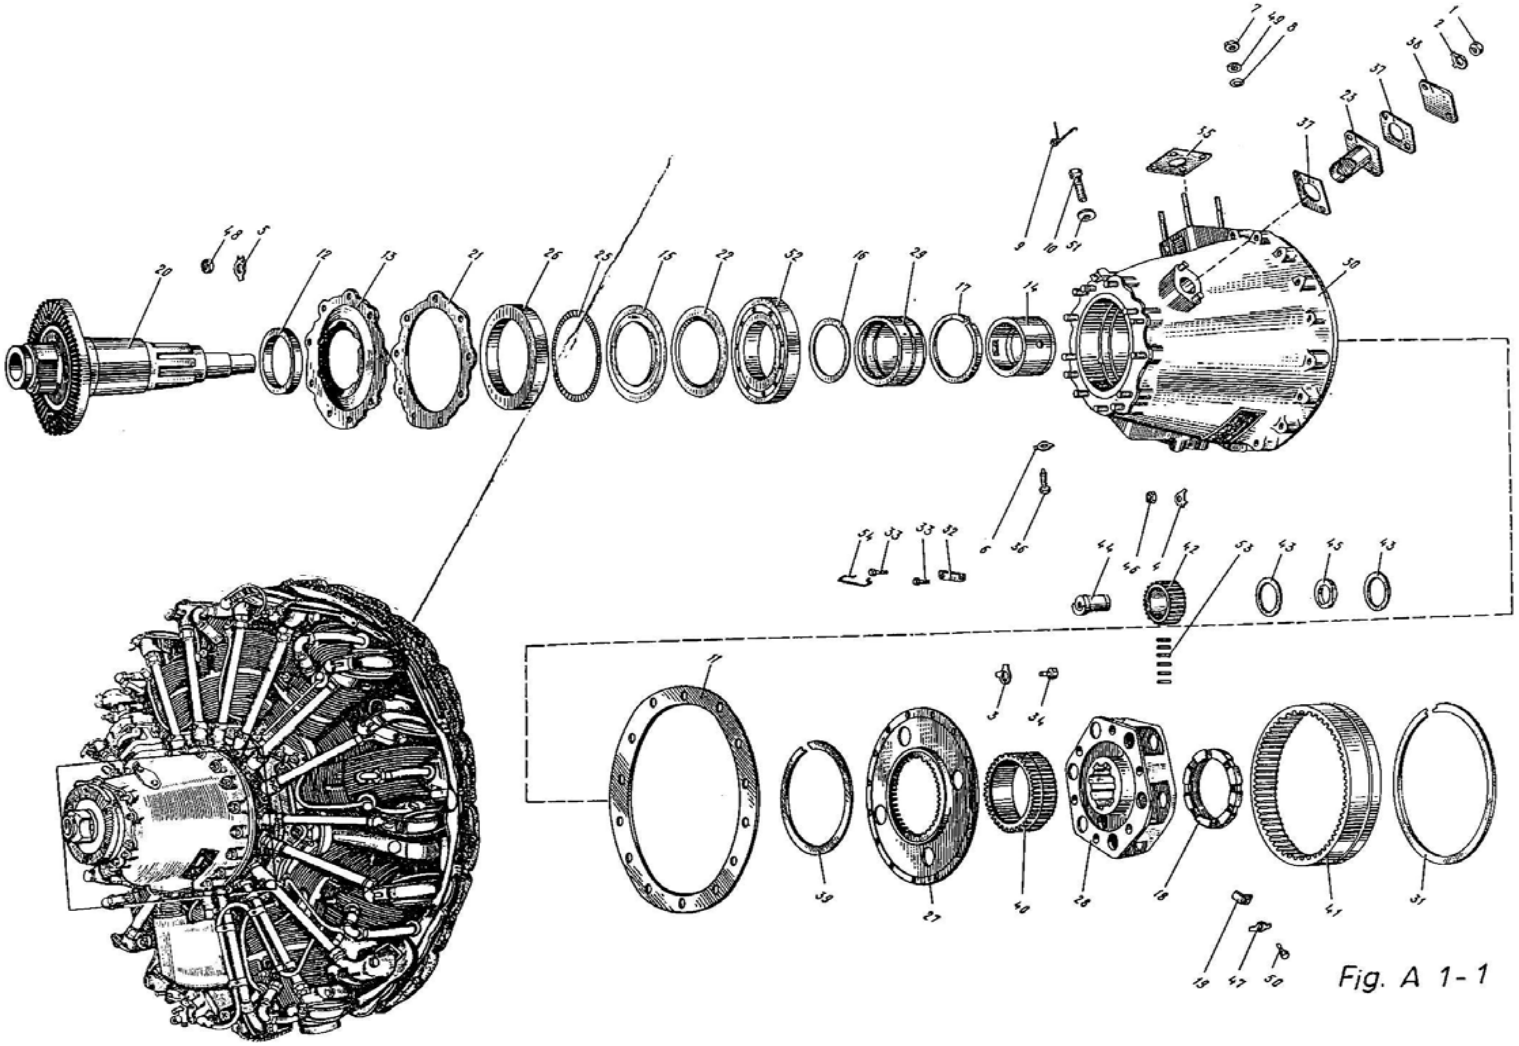

Part Number	Name	Page No.	FIG. No.	#/Assy
14-010-700	Reduction gear	8		1
00-03-58	Nut	8	A11-1	2
00-05-51	Safety	8	A11-2	2
00-05-54	Safety	8	A11-3	15
00-12-504	Safety	8	A11-4	15
00-711-05	Safety	8	A11-5	9
10-01-25	Safety	8	A11-6	1
11-08-40	Nut	8	A11-7	4
11-08-58	Washer	8	A11-8	1
12-01-39	Clip	8	A11-9	1
12-01-92	Oil filter	8	A11-10	1
14-01-527	Gasket	8	A11-11	1
14-010-206	Bushing	8	A11-12	1
14-010-457	Reduction gear cover	8	A11-13	1
14-010-211	Bushing	8	A11-14	1
14-010-212	Ring	8	A11-15	1
14-010-214	Ring	8	A11-16	6
14-010-216	O-ring	8	A11-17	1
14-010-217	Nut	8	A11-18	1
14-010-218	Safety	8	A11-19	1
14-010-455	Propeller shaft	8	A11-20	1
14-010-659	Western Prop shaft	8	a-11-20	1
14-010-221	Gasket	8	A11-21	1
14-010-452	Ring	8	A11-22	1
14-010-300	Breather	8	A11-23	1
14-010-350	Packing rubber	8		1
14-010-223	Spring	8	A11-25	1
14-010-360	Armature	8	A11-26	1
14-010-372	Hub	8	A11-27	1
14-010-373	Spider case	8	A11-28	1

14-010-378	Bushing	8	A11-29	1
14-010-680	Case	8	A11-30	1
14-10-09	Ring	8	A11-31	2
14-10-12	Plate	8	A11-32	6
14-10-13	Screw	8	A11-33	12
14-10-19	Pin	8	A11-34	15
14-1021	Gasket	8	A11-35	1
14-10-24	Pin	8	A11-36	1
14-10541	Gasket	8	A11-37	2
14-610-193	Cover	8	A11-38	1
14-710-29	Ring	8	A11-39	1
14-710-30	Gear	8	A11-40	1
14-710-31	Gear rim	8	A11-41	1
14-910-009	Spider	8	A11-42	6
14-910-011	Washer	8	A11-43	12
14-610-957	Spider pin	8	A11-44	6
14-610-492	Washer	8	A11-45	6
26-11-17	Nut	8	A11-46	15
26-28-23	Safety	8	A11-47	1
66-RD-2	Nut	8	A11-48	9
6.65G.05 GOST 6402	Grower washer	8	A11-49	4
3151A-4-8	Screw	8	A11-50	1
AK-05-001	Gasket	8	A11-51	1
V214D1 ETU 100/1	Bearing	8	A11-52	1
2.5x9,8 III ETU 100/7-u	Needle	8	A11-53	396
KO 0,8 GOST 792	Safety wire	8	A11-54	0,5m

Crankcase Front Cover, Main Crankcase, Crankshaft and Connecting Rod Assemblies

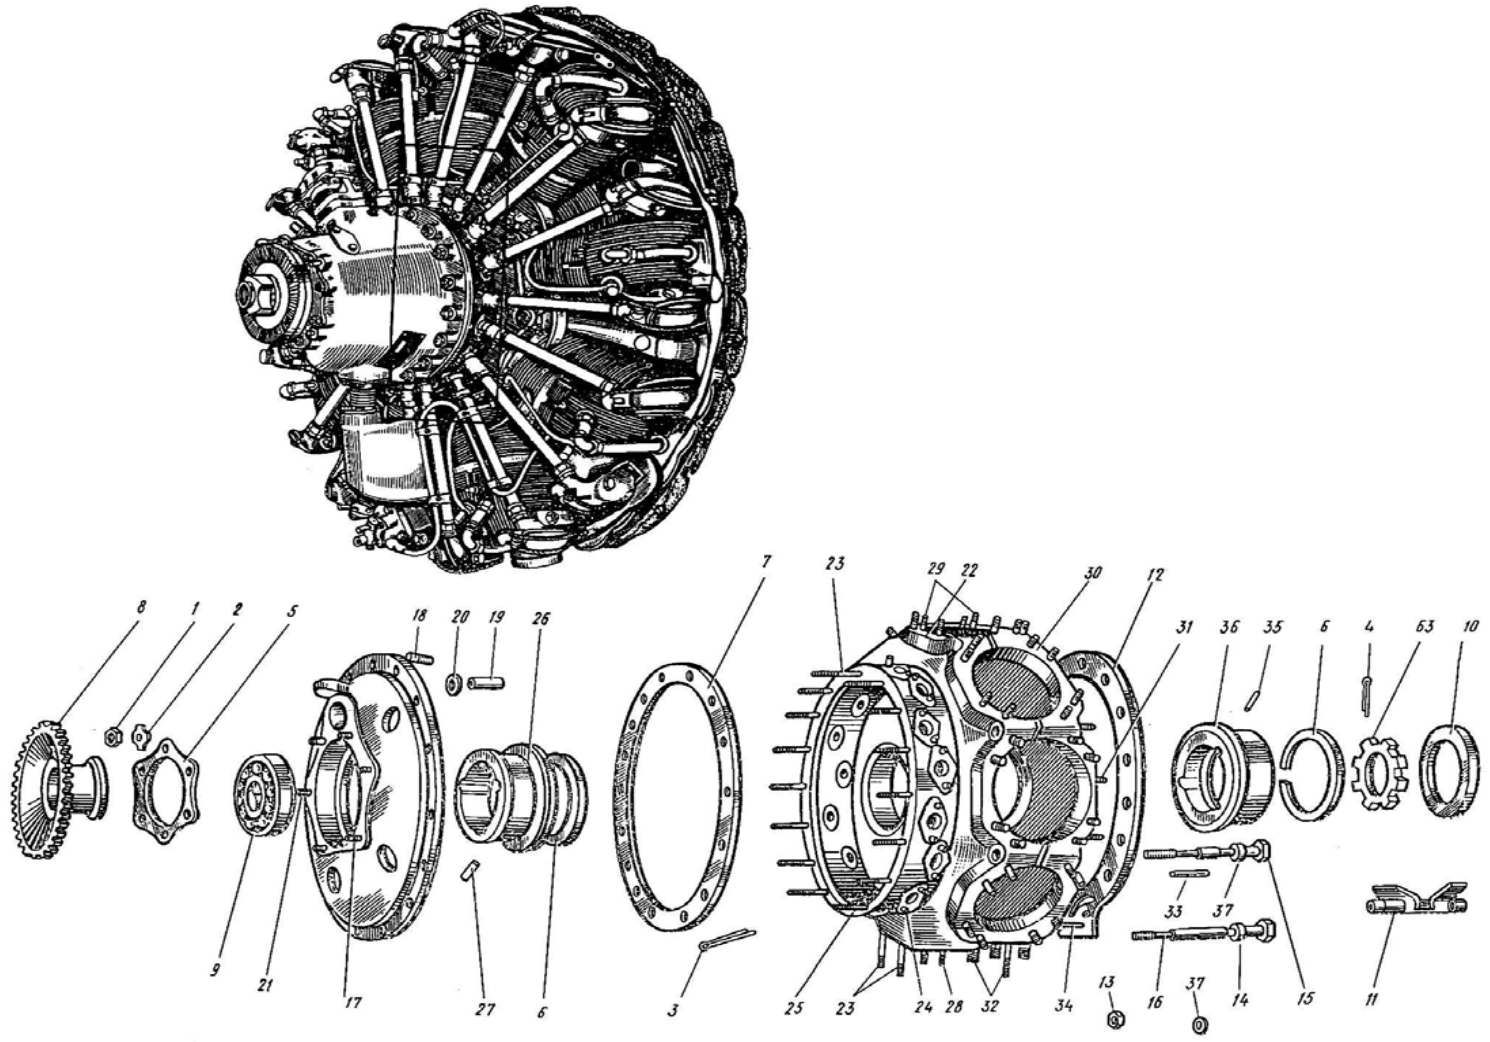

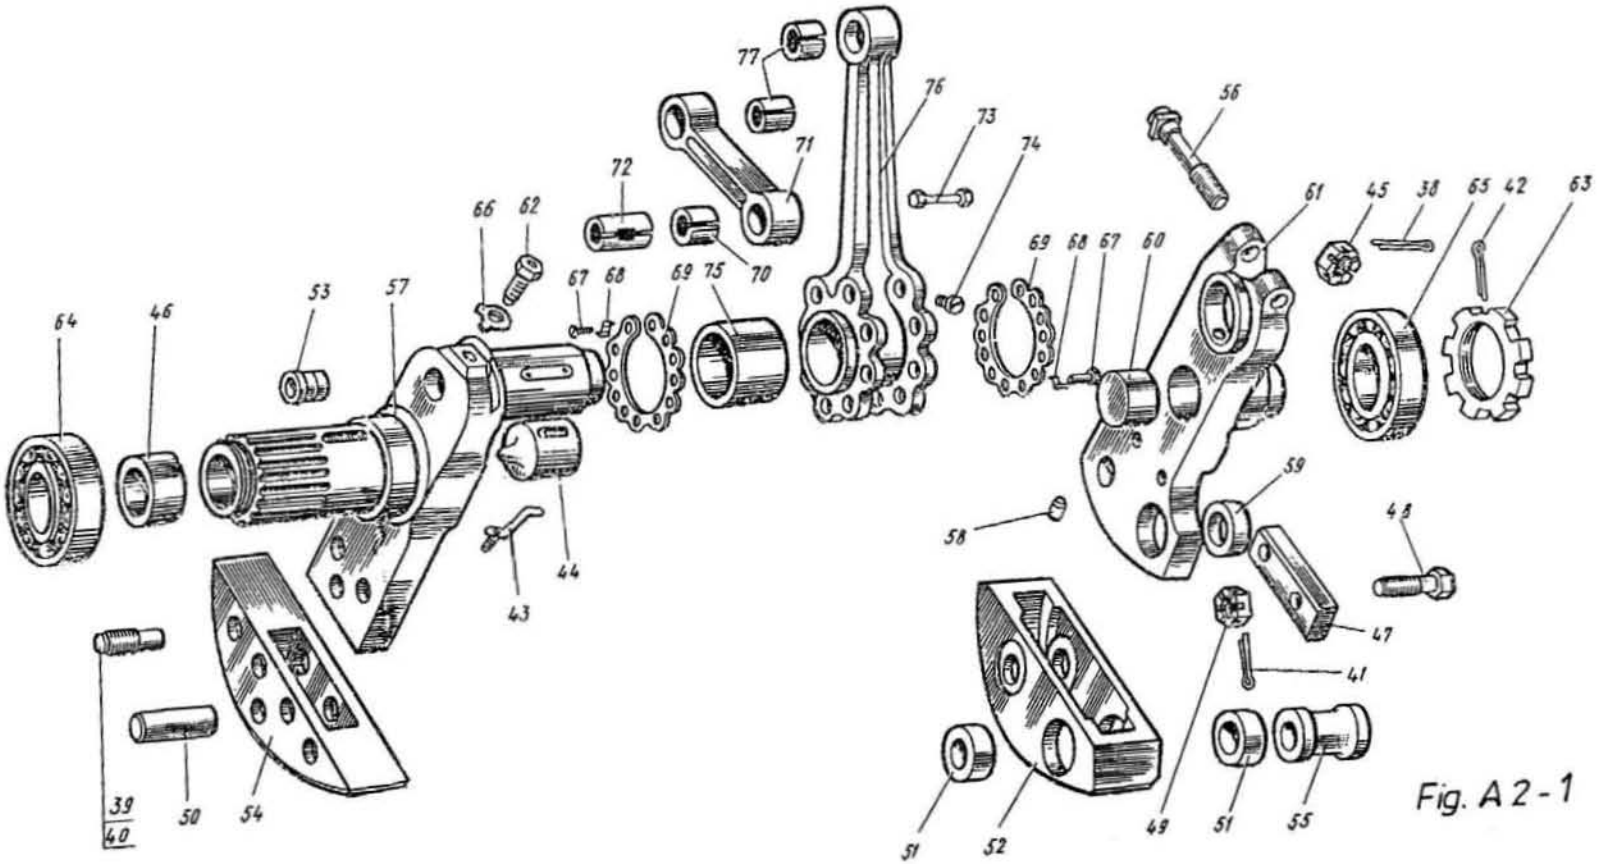

77
76
73
56
71
72
74
66
62
61
45
38
65
42
63
69
68
67
60
64
46
53
57
67
68
69
75
70
59
58
48
44
43
47
41
39
40
50
54
51
52
49
51
55

Fig. A 2 - 1

Part Number	Name	Page No.	FIG. No.	#/ Assy
00-03-58	Nut	11	A21-1	6
00-15-51	Safety	11	A21-2	6
00-12-07	Split	11	A21-3	9
00-711-09	Split	11	A21-4	1
14-01-22	Flange	11	A21-5	1
14-01-33	Ring	11	A21-6	2
14-01-527	Gasket	11	A21-7	1
14-003-001	Hub	11	A21-8	1
14-03-23	Bearing	11	A21-9	1
14-03-45	Ring	11	A21-10	1
14-601-102	Oil deflector	11	A21-11	1
14-901-310	Middle crankcase and cover	11		1
14-601-114	Gasket	11	A21-12	1
00-03-52	Nut	11	A21-13	9
00-07-500	Washer	11	A21-14	1
14-01-04	Pin	11	A21-15	8
14-601-103	Pin	11	A21-16	1
14-901-180-01	Prior cover	11	A21-17	1
00-01-519	Bolt	11	A21-18	6
14-01-526	Pipe-line	11	A21-19	1
14-301-04	Ring	11	A21-20	2
62-10-53	Bolt	11	A21-21	6
14-901-270-01	Prior semi-crankcase	11	A21-22	1
00-01-505	Bolt	11	A21-23	17
00-01-519	Bolt	11	A21-24	36
00-01-541	Bolt	11	A21-25	4